

Free Spin bonus

3 or more symbol Scatter Briefcases in any position triggers the free spin bonus.

Trigger	Entry Award	Spins	Re-trigger?		
Any 5 Scatter Briefcases	0	4 - 20	Yes- 4 - 20 Spins		
Any 4 Scatter Briefcases	0	4 - 20	Yes- 4 - 20 Spins		
Any 3 Scatter Briefcases	0	4 - 20	Yes- 4 - 20 Spins		
Free spin reels are DIFFERENT from base game reels.					
Bet Per Line and Lines bet are the sa	me as the triggering base g	ame.			

Only 3 Scatter Briefcases re-trigger combos are possible during free spins

We Innovate! We Design! We Amaze! We Deliver!

Pervasive Gaming develops, deploys, sells and manages state-of-the-art Class II and Class III gaming terminals and slot machines.

The Company's competitive advantage is the depth of its portfolio and the features inherent to its games that deliver a truly entertaining gaming experience.



PervasiveGaming.com (405) 601-8999



Double O' Cash CLASS II & III

You can enjoy your martini but brace yourself for the helicopter chase of a lifetime. Good guys, bad guys and beautiful women invite you to a "Mine Blowing bonus round".

	90%	<u>92%</u>	94%
Base Return	57.434%	59.417%	61.420%
Bonus Return	32.588%	32.588%	32.588%
Bonus Frequency	94	94	94





Double O' Cash

Double O' Cash can be installed as a Class III or Class II game.

In Class II, two or more players may be required for the game to start. To enter a game, press "Spin". Interim prizes are paid for matching the pre-designated patterns in the Prize Schedule within 24 balls. Some of the predesignated Patterns will award the player with one or more additional free Bingo cards. The Bingo game ends when a player covers all 25 numbers on their Bingo card. This Game Ending Pattern is called a coverall. The coverall pattern pays a prize of 1 cent. Any time after the interim prizes are awarded in an ongoing Bingo game, the player may choose to purchase a new Bingo card by pressing "Spin". The new Bingo card will catch up with the game in progress. The player may continue to purchase additional Bingo cards in the same manner, until the game is completed. When a newer card for the same game has been purchased, any previous card forfeits its chance to win the coverall.

The Class II version of Double O' Cash also has an entertaining display of the results of each Bingo card using a 5 reel, 25 line display that incorporates Free Spins, Re-triggered Free Spins and Bonus features. Actual prizes are determined by Bingo play and other displays are for entertainment only.

Class II or III Entertaining Display Description:

The Double O' Cash symbol is wild and substitutes for all symbols except for scatters. All wins pay from left to right on adjacent on adjacent reels except for scatters. Line wins are multiplied by the credits bet per line.

Class II or III Double O' Cash Free Spins:

The Free Spin feature is initiated when three or more Scatter Safes appear in any position on any reels in the display. Three scatters triggers up to 20 free spins. Each hero gadget will give an unique bonus feature to the free spin round. Only 3 Scatter Briefcases re-trigger combos are possible during free spins.

Symbol Set and Pay Table

Symbol	Туре	5	4	3	2
Double Oʻ Cash Pin*	Wild	4,000	750	100	5
00 Character	Line	750	250	50	
00 Motorcycle	Line	750	250	50	
Lady in Red	Line	500	100	25	
Villain with Cat	Line	400	100	25	
Female Agent	Line	250	75	25	
Villain with Chain	Line	125	25	5	
Helicopter	Line	100	25	5	
Car	Line	100	20	5	
Pistol	Line	100	20	5	2
Scatter Briefcase	Scatter	Free Spin Bonus			

^{*}Double O' Cash pin is Wild and can substitute for any other symbol except Scatters.



Billboard



Free Spin Feature



Scatter Bonus

